

User Manual



Dear Customer:

Thank you for buying our BT Speaker. In order to let you experience the product swimmingly, detailed instruction is provided which you can find the product introduction, usage method, Q & A and so on. Before using this product, please read this manual carefully, so that you can correctly use it. In case of any printing or translation error, we apologize for the inconvenience. As for the content change, we are sorry for no further notice.

Package Contain

- BT Speaker
- One Micro USB Charging Cable
- One 3.5MM Aux in Cable
- One User Manual

01. Warning:

- Please use and store this product at room temperature.
- Do not expose this product to rain or wet environment.
- Do not throw or drop this product to avoid product damaged.
- Do not self-disassembly and repair the product.
- Do not arbitrarily discard or place the lithium battery into the fire to avoid the risk of explosion.

02. Function overview

[BT connection] Wireless range up to 10M

[Hands-Free call] Hands-Free call function with clear voice and no echo


[Audio Player] Support play MP3/WAV. Files in TF Card, USB or through BT Connection

[Audio Input] A stereo 3.5mm input jack enable the sound source connection with computers, digital media player, mobile phones and other audio-visual products.

[Rechargeable Battery] Support battery recharge through USB Cable

[FM Radio] FM Digital stereo radio

03. Definition of Button and Jack

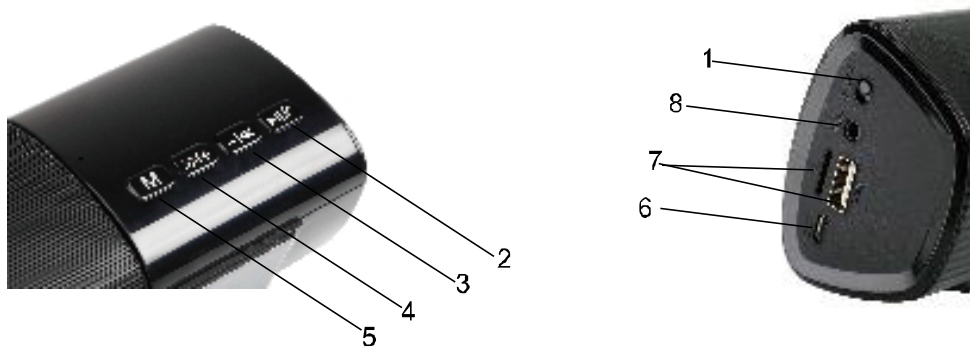

1. ON/OFF: power switch; ON to open, OFF to close.
2. Short Press: Play/Pause/Phone/hang up
Long Press: in FM mode Fully automatic searching FM Channel
3. Short Press: Previous song/Radio Station
Long Press: Adjust the volume decrease
4. Short Press: next song/Radio Station
Long Press: Adjust the volume increase
5. Short press to switch mode
6. Micro USB: Charging interface
7. TF/USB: Insert TF Card or U Disk broadcast WAV/MP3 music
8. Aux: Aux input

04. Introduction of indicate light

The indicator will be red during charging; in fully charging, the indicator will be off.

05. Bluetooth Connection

1. Pairing with the devices that support BT Function
2. Switch on the speaker, enter into BT mode
3. Switch on the BT function of the phone, pad or other BT audio player, search for BT Speaker
4. Pairing the speaker, default password is 0000 if needed.

Notes:

The speaker will auto-connect the last paired device when it restarts.

06. Audio Player

The operation system of this product is able to automatically identify the audio resource. After the product start up and insert TF card/U Disk or connect to audio player through BT or audio line, the product will identify the audio resource and play the music automatically following the principle of later coming first. The product also support output the audio to other music player through the 3.5mm audio line connection. For more detail usage method, please refer to 3rd item” Definition of Bluetooth and jack”.

07. Charging

Connect the speaker to electric socket(100-240V)through the USB charging cable with a DC5V-500mA USB adaptor.

08. Technical Information

Speaker Type	Portable Bluetooth Speaker
Main Feature	Wireless Bluetooth/TF Card /Aux-In /U Disk /FM Radio /Hands Free Calling
Storage type	Max 32GB Micro TF Card/U disk
Power Supply	Built-in 1200mAh lithium rechargeable battery DC 5V-500mA USB adaptor
Output Power	2*5W
Frequency Response	80Hz-20KHz
Bluetooth Version	V5.0
Audio File Format	MP3, WAV
Product Size	400*55*70mm
Temperature range for use	0-40°C
Net Weight	605G

09. RFQ

Question	Answer
Paired Bluetooth Device Failed	<ol style="list-style-type: none">1. Restart the speaker2. If password needed, please input"0000"
Music playing hang up	Please check whether something cut off the BT Signal or the BT connection distance is too long
File Format Fault	<ol style="list-style-type: none">1. Check if the TF Card format is right (the speaker support FAT 32 Format TF Card)2. Check if the audio file format is right. (The speaker support MP3/WAV format files)
Speaker no Sound	<ol style="list-style-type: none">1. Check the volume of speaker is minimum2. Check if the speaker is paused3. Check the BT/TF card/Aux line connection is ok, restart the BT or change a TF card/Aux line to retest.
Speaker can't Turn on	Check if the speaker is out of power
Speaker no response	Press the reset key to reboot the speaker