


Lighting Bluetooth Soundbar

User Manual

Model: 4897



Product Outline

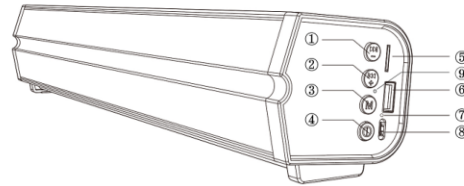

- | | |
|-------------------------|---------------------------|
| ① Next song/Volume down | ② Previous song/Volume up |
| ③ M mode button | ④ Power button |
| ⑤ TF card insert | ⑥ U disk insert |
| ⑦ Indicator light | ⑧ TYPE-C charging port |
| ⑨ MIC port | |

Product Using

1. Long press the power button for 5 seconds to open the device. Single click to pause playing in Bluetooth music, TF card and U disk mode. When an incoming call comes, single click the power button to answer the call/ hang up. Double-click to reject a call. Triple click to replay the last call. When dialing, single click to cancel the call.
2. When no USB flash drive or TF card is inserted, the product will enter the Bluetooth pairing state. Open the mobile phone and search for the pairing name: "4897" connect the Bluetooth and enjoy the music time. If your device requires a password, please enter "0000" to confirm the pairing process.
3. M mode button: Single click to adjust the LED lighting mode. (7 modes, short press the M mode to adjust the light effect.) Long press to switch into FM/TF/USB mode. In FM mode, Double-click the power button to automatically search the stations.
4. Next song, Bluetooth music, TF card and U disk mode, single click to play the next song. In FM mode, single click to switch to the next station. In all the above modes, Long press to reduce the volume.

5. Last song, Bluetooth music, TF card and U disk mode, single click to play the next song. In FM mode, single click to switch to the last radio station. In all the above modes. Long press to increase the volume.

Specifications

Bluetooth version: V5.2
Speaker power: 5W*2
Battery: 3.7V/1200mAh
Using time: 2-3 Hours
Charging time: 2.5 Hours
Charging port: type-c
Charging input: 5V/1A

Attention

1. Do not squeeze or bump.
2. Do not disassemble or put into fire or water to avoid short circuit and leakage.
3. Do not use in severe high temperature, humidity, or corrosive environment, to avoid damage to the circuit leakage phenomenon.
4. Do not place it too close to the magnetic card (such as ID card or bank card) with the magnetic stripe or chip. Otherwise, the magnetic card may become invalid.
5. Keep the product away from water and other liquids.
6. When the battery is low, if you want to use, please turn down the volume. charge the device in short time.
7. Ambient temperature: 0-45°C.

מפרטים טכניים

גרסת Bluetooth: V5.2
הספק רמקול: 5 וואט X 2
סוללה: 3.7 וולט / 1200 מ"מילי אמפר
זמן שימוש: 2-3 שעות
זמן טעינה: 2.5 שעות
שקע טעינה: Type-C
כניסה לטעינה: 5 וולט / 1 אמפר

שימו לב


1. אין לסחוט או לחבוט.
2. אין לפרק או להכניס לתוך האש או לתוך מים וזאת על מנת למנוע קצר חשמלי ודליפה.
3. אין לעשות שימוש במוצר בתנאי טמפרטורה מאוד גבוהות, בתנאי לחות או בסביבת משתכת (חומצית) קיצונית, וזאת על מנת למנוע נזק ולתופעת דליפה במעגל החשמלי.
4. אין למקם את המוצר קרוב מדי לכרטיס מגנטי (כגון כרטיס ID או כרטיס אשראי בנקאי) עם פס מגנטי או שבב. אחרת, הכרטיס המגנטי עשוי להינזק.
5. הרחיקו את המוצר ממים וכל נוזל אחר.
6. כאשר הסוללה חלשה, במידה וברצונכם לעשות שימוש, אנא הנמיטו את עוצמת הקול, הטעינו את המכשיר בהקדם.
7. טמפרטורת סביבה: 0 - 45°C.

טריפל בום סוכנויות
515837441

השימוש במוצר

1. **הדלקה** - לחצו לחיצה ארוכה על לחצן ההפעלה/כיבוי במשך 5 שניות. הקליקו פעם אחת להשהיית נגינת המוסיקה באמצעות Bluetooth, כרטיס TF ומצב דיסק U. במקרה של שיחה נכנסת, הקליקו פעם אחת על לחצן ההפעלה/כיבוי למענה לשיחה/לניתוק. הקליקו פעמיים לדחיית שיחה נכנסת. הקליקו שלוש פעמים לחזרה לשיחה הנכנסת האחרונה. בזמן חיג, הקליקו פעם אחת לביטול השיחה.
2. **BT-אם** בעת הדלקה לא מוכנס התקן USB או כרטיס TF, המוצר ייכנס מיידית למצב שיוך Bluetooth. פתחו את מכשיר הטלפון הנייד וחפשו: "4897", ולחצו עליה לחיבור. במידה והמכשיר שלכם דורש סיסמא, אנא הזינו "0000".
3. **תאורת אוריה** - לחצן מצב M: הקליקו פעם אחת לכוונון מצב תאורת ה-LED בעל 7 מצבים, המעבר בעזרת לחיצות קצרות על לחצן מצב M.
4. **רדיו** - לחצו לחיצה ארוכה למעבר למצב FM/TF/USB. במצב FM, הקליקו פעמיים על לחצן ההפעלה/כיבוי לביצוע חיפוש אוטומטי למציאת תחנות.
4. **השיר הבא** - בכל מצבי המוסיקה הקליקו פעם אחת על (▶▶) להשמעת השיר הבא. במצב FM, הקליקו פעם אחת למעבר לתחנה הבאה. בכל המצבים שצוינו לעיל, לחצו לחיצה ארוכה על (▶▶) להפחתת עוצמת הקול.
5. **השיר הקודם** (◀◀) או לחיצה ארוכה להגברת עוצמת הקול.

תכונות הכפתורים

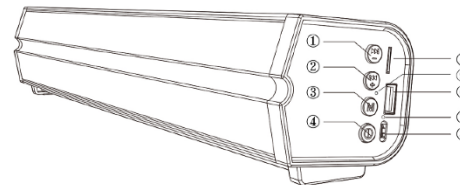

1. ▶▶ השיר הבא / הנמכת עוצמת קול
2. ◀◀ השיר הקודם / הגברת עוצמת קול
3. M לחצן מצב תאורת אוריה (7 מצבים)
4. ⏻ לחצן הפעלה / כיבוי
5. פתח להכנסת כרטיס TF
6. אבזר דיסק U
7. נורית חייווי
8. שקע טעינה TYPE-C
9. שקע למיקרופון

SOUND BAR 4987
רמקול סאונד-בר איכותי
עם שני רמקולים 2x5W מובנים,
מופעל BLUETOOTH

דגם 4987

מדריך למשתמש

