

מדריך למשתמש

הפעלת Bluetooth
(1) ברגע של מעבר למצב Bluetooth נורית חייווי BT (11) תתחיל להבהב בצבע כחול במהירות, נורית החיווי תהבהב לאט בצבע כחול ברגע שפונקציית BT מחוברת.
(2) הפעילו את פונקציית Bluetooth במכשיר הטלפון שלכם, חפשו אחר רכיב Bluetooth עם השם "RetroBeat" ובחרו אותו

חיבור כבל AUX 3.5 מ"מ
על מנת לעשות שימוש ברמקול בחיבור כבל קווי, חברו מחבר אחד של כבל שמע 3.5 מ"מ לתוך שקע כניסת שמע עזר 3.5 מ"מ (5) ברמקול. את צידו האחר לשקע האוזניות של מקור המוסיקה שלכם. בזמן שהכבל מחובר הרמקול ישמיע רק את מקור זה.

השמעת מוסיקה דיסקאונקי USB
הכניסו את הדיסקאונקי לשקע USB (4) להשמעת המוסיקה המאוחסנת על התקן הדיסקאונקי, הרמקול יגן באופן אוטומטי שירים מהדיסקאונקי לחצן (7) למעבר לשיר הקודם, לחצן (9) למעבר לשיר הבא.
לחצן (8) לשליטה בהשהיית הנגינה או הפעלה מחדש

מקש MODE (מצבי)ם
השתמשו במקש זה (6) למעבר בין מצבים: AM, FM, USB, AUX, BT. נורית חייווי BT/USB (11) תהבהב במהירות בצבע כחול עם הכניסה למצב Bluetooth ותישאר מוארת בצבע כחול קבוע לאחר שפונקציית BT מחוברת, תהבהב לאט בצבע אדום במקרה של נגינה במצב USB. נורית חייווי AM/FM (13) תאיר בצבע כחול קבוע במקרה של נגינה במצב AM, לחצו שוב על לחצן MODE (6), נורית חייווי AM/FM תאיר בצבע אדום קבוע במקרה של נגינה במצב FM. נורית חייווי BT/USB תהבהב באיטיות בשני צבעים בעת שימוש במצב AUX.

לחצו על המקש (7) למעבר שיר לאחור
לחצו על המקש (9) למעבר שיר קדימה
לחצו על המקש (8) לנגינה/להשהיית נגינה של המוסיקה.


שימוש ב-FM
סובבו את כפתור (10) לכיוון ובחירת תחנות רדיו במצב FM ובמצב AM

לכוונן עוצמת הקול
סובבו את כפתור עוצמת הקול (VOLUME) (12) לשליטה בעוצמת הקול.

כיבוי והפעלה
כפתור (1) בגב המכשיר

רמקול רדיו AM/FM רטרו
מדריך למשתמש
כבל טעינה Type-C

מיקום לחצני הבקרה
1. הפעלה/כיבוי
2. שקע טעינה Type-C
3. חייווי טעינה
4. שקע USB
5. שקע AUX
6. לחצן מצבים (MODE)
7. מעבר לשיר קודם
8. נגינה/השהיית נגינה P(LAY/PAUSE)
9. מעבר לשיר הבא
10. אנטנת AM/FM
11. נורית חייווי לציין BT/USB
12. לחצן עוצמת קול
13. חייווי AM/FM

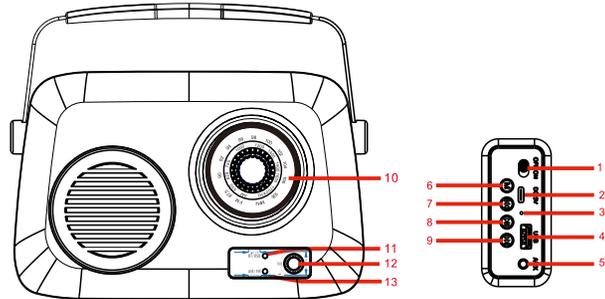

לפני השימוש בפעם הראשונה:

הכניסו את המחבר של כבל הטעינה Type-C לתוך שקע הטעינה (2) שבחלק האחורי של הרמקול. הכניסו את המחבר הגדול לתוך שקע ה-USB במחשב, או למתאם קיר (לא כלול).
נורית החיווי (3) תהפוך לצבע אדום בזמן טעינה, בסיים הטעינה הנורית תיכבה.
*במקרה של רמת סוללה נמוכה, יישמע צליל, המציין שהרמקול מצריך הטענה.

רדיו רטרו AM/FM Bluetooth RetroBeat דגם 5152




מדריך למשתמש

User Manual

AM/FM Retro Radio Speaker
User Manual
Type-C Charging Cable

Location of Controls
1. ON/OFF
2. Type-c Charging Port
3. Charging Indicator
4. USB Port
5. AUX Jack
6. MODE
7. Previous Track
8. Play/Pause
9. Next Track
10. AM/FM Antenna
11. BT /USB Indicator
12. Volume
13. AM / FM Indicator

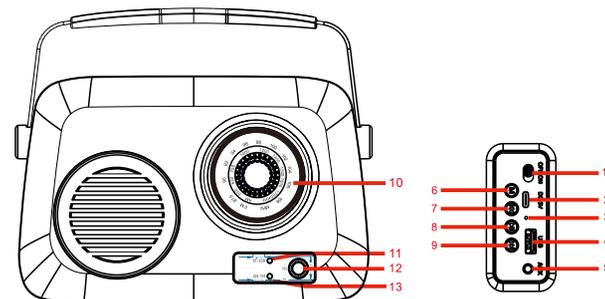

Before first use:

Insert the small connector of the Type-C Charging Cable into the Charging port (2) on the back of the speaker. Insert the large connector into the USB port on a computer, USB charging device, or 5V USB adapter(not include) and plug into a wall outlet.
The LED indicator (3) will turn RED while charging and go off when fully charged. On low power, a tone will be heard, indicating that the speaker needs to be charged.

RetroBeat AM/FM BluetoothRetro Radio Model:5152



User Manual

Bluetooth Operation

1) the BT indicator (11) will flash blue light quickly When switches to Bluetooth mode, will flash blue light slowly when BT connected.
2) Turn on the Bluetooth function on your external Bluetooth device, search on it for the Bluetooth device with the name "RetroBeat" and indicate with it a pairing and connection.

Using with a Wired Device

To used the speaker as a wired device, plug one connector of the 3.5mm audio cable into the 3.5mm auxiliary audio input jack (5) on the speaker. Plug the other connector into the headphone jack of your media-playing device. While connected, playback is controlled via the wired device.

Using USB playing

Insert USB device to USB port (4) to play music stored on the drive, the product will automatically play songs in USB, you can used button (7) to switch to previous song, use the button (8) to control play and pause the music, used the button (9) to switch to next song.

MODE

Use this key (6) to toggle between modes: BT, AUX, USB, FM, AM the BT/USB indicator (11) will flash blue light quickly when enter into Bluetooth mode and will keep blue light after BT connected, will flash red light slowly when play in USB mode; the AM/FM indicator (13) will constant blue light when play in AM mode, press MODE (6) again, the AM/FM indicator (13) will constant red light when play in FM mode. The BT/USB will flash Two-colour light slowly when using AUX mode.

Previous Track

Press the key (7) to move back through the playlist.

Play/Pause

Press the key to play/pause (8) the music.

Next Track

Press the key (9) to move forward through the playlist.

Using FM

You can used the knob (10) to tune the FM and AM stations

For Volume adjustment

Turn the VOLUME knob (12) to control the volume.