


מטען אלחוטי משולב עם שעון שולחני דיגיטלי 5461 מדריך למשתמש

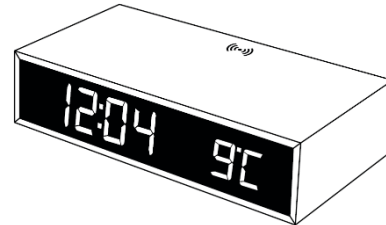

מומלץ לקרוא בעיון מדריך למשתמש
זה ולשמור אותו לעיון עתידי.

סקירת המוצר:

15 וואט מטען אלחוטי משולב עם שעון מעורר
מבמבוק



מפרטים טכניים:

- מתח כניסה 5V/3A 9V/2A
- הספק יציאה אלחוטית: 5 וואט / 7.5 וואט / 10 וואט
- וואט / 15 וואט (9 וולט / 1.67 אמפר מקסימום).
- מרחק עבודה עד 6 מ"מ.
- מתאים לכל המכשירים הניידים עם טכנולוגיית Qi.
- טווח טמפרטורה: 0-50°C, 32-122°F
- שעון: (12/24h).

הפעלה:

חברו את המכשיר לאספקת החשמל.

הפעלת מטען אלחוטי:

הניחו את המכשיר התומך ב-Qi על גבי המטען
האלחוטי, ודאו שהוא פונה כלפי מעלה
וממורכז.

הערה: כדי להבטיח שהמטען פועל כראוי,
מומלץ להסיר את כיסוי ההגנה של הטלפון
שלכם.



הפעלת השעון המעורר:

לחצו על לחצן SET כדי לעבור בין המצבים DP1 ו-DP2:

- מצב DP1: המסך יציג שעה, תאריך וטמפרטורה.
- מצב DP2: המסך יציג רק שעה וטמפרטורה.

לחיצה ארוכה על לחצן UP תחליף את תצוגת הטמפרטורה
בין °C ל-°F.

- תבנית שעה: החזיקו את לחצן SET למשך 3 שניות, עד
שהתצוגה תראה 12H/24H. לחצו על UP או DOWN
כדי לשנות ולחצו על SET כדי לאשר. לחצו על UP או
DOWN כדי לשנות את השעה.

כאשר אתם משתמשים בתבנית של 12 שעות, נקודה לבנה
תוצג בצד השמאלי העליון של המסך כאשר השעה היא לאחר
הצהריים.

לחצו על לחצן SET כדי להציג את התאריך. לחיצה ארוכה
נוספת על SET תאפשר לכוון את הפרטים הבאים:

- שנה
- תאריך
- התראות A1, A2 ו-A3. לחצו על לחצני UP/DOWN כדי
להפעיל את ההתראה (התצוגה תראה ON ליד שם
ההתראה כאשר היא מופעלת). לחצו לחיצה ארוכה על
SET כדי לכוון את ההתראה. לחצו על SET כדי לעבור
להתראה הבאה.

- כדי לכוון את הבהירות:
לחצו על לחצן DOWN כדי לכוון את הבהירות.
- BA: הבהירות תכוון באופן אוטומטי בהתאם לשעה.
- B1-B4: כונו את הבהירות מנמוכה לגבוהה.
- L5: המסך יכבה באופן אוטומטי. לחצו על DOWN כדי
להפעיל את המסך.


אזהרות:

- אל תחשפו מוצר זה לגשם או לתנאי לחות.
- מנעו מפריט זה ליפול מכיוון שהדבר עלול לגרום לנזק
חמור.
- אל תפרקו, תתקנו או תשנו מוצר זה בעצמכם, פנו לנציג
שירות מורשה.
- כדי למנוע כל סיכון, אל תשליכו מוצר זה בצורה לא
מתאימה.
- נקו אותו באמצעות מטלית יבשה.
- אל תניחו פריט זה ליד מקורות חום או תחשפו אותו לאור
שמש ישיר.
- אל תכניסו חפצי מתכת כלשהם לתוך מוצר זה מכיוון שקיים
סיכון לגרימת קצר ביחידה.
- כדי למנוע סיכון, אל תניחו חפצי מתכת כלשהם בין המטען
לבין המכשיר הנייד במהלך תהליך הטעינה.
- אל תשתמשו במכשירים ניידים עם כיסוי מתכתי.



Multifunction Wireless Alarm Clock

User manual

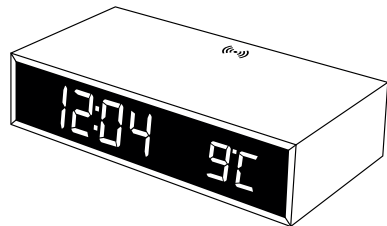

It is recommended to read this user manual carefully and keep it for future reference.

Product overview:



15W Bamboo Alarm Clock Wireless charger

Specifications:

- Input Power 5V3A 9V/2A
- Wireless out put power: 5W/7.5W/10W/15W(9V/1.67A max)
- Working distance up to 6mm
- Suitable for all mobile devices with Qi technology.
- Temperature range: 0-50°C, 32-122°F
- Clock: (12/24h)



Operation:

Connect the device to the power supply.

Wireless charger operation:

Place your Qi compatible device on top of the wireless charger, make sure that it is face up and centered.

Note: To ensure that the charger works correctly, it is recommended to remove the protective case of your phone.

Clock operation:

Press the SET button to switch between DP1 and DP2 modes:

- DP1 Mode: The screen will show time, date and temperature.
- DP2 Mode: The screen will show only time and temperature.

Long press the UP button to switch the temperature format between °C y °F.

- HOUR FORMAT: Hold down the SET button for 3 seconds, until the display shows 12H/24H. Press UP or DOWN to change it and SET to fix it. Press UP or DOWN to change the hour.

When you are using the 12 hours format, a white dot will be displayed at the top left side of the screen when the time is after the midday.

Press SET button to show the date. Long press SET again to adjust the below details:

- YEAR
- DATE
- ALARMS A1, A2 Y A3. Press UP/DOWN buttons to enable the alarm (The display will show ON near to the alarm name when it is enabled). Long press SET to adjust the alarm. Press SET to change to the next alarm.

- To adjust the brightness: Press DOWN button to adjusts the brightness.
- BA: The brightness will adjust automatically depending on the time.
- B1-B4: Adjust the brightness from lower to higher.
- L5: The screen will turn off automatically. Press DOWN to turn on the screen.

Warnings:

1. Do not expose this product to rain or damp conditions.
2. Prevent this item from falling as it could cause serious damage.
3. Do not dismantle, repair or modify this product by yourself, contact an authorized specialist.
4. In order to avoid any risk, do not dispose of this product inappropriately.
5. Clean it with a dry cloth.
6. Do not place this item near sources of heat or expose to direct sunlight.
7. Do not insert any metal objects into this device as there is a risk of causing a short circuit in the unit.
8. To avoid risk, do not place any metal objects between the charger and the mobile device during the charging process.
9. Do not use mobile devices with a metal case.

